




HERZ - Sanitary Water Manifold

Data sheet 2 8530 XX, Issue 1225

☑ Dimensions

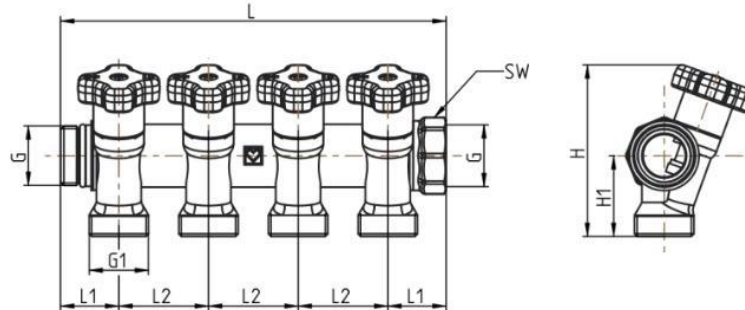

Art. Nr.	DN	Circuits	PN [bar]	G [in]	G1 [in]	L1 [mm]	L2 [mm]	H1 [mm]	H [mm]	L [mm]	Sw [mm]
2 8530 02	20	2	10	3/4"	3/4" eurocone	26	40	36	76.5	92	32
2 8530 03	20	3	10	3/4"	3/4" eurocone	26	40	36	76.5	132	32
2 8530 04	20	4	10	3/4"	3/4" eurocone	26	40	36	76.5	172	32
2 8530 14	25	4	10	1"	3/4" eurocone	29.3	38	35.6	74.5	172	39
2 8530 15	25	5	10	1"	3/4" eurocone	29.3	38	35.6	74.5	210.5	39

*4- circuit manifold is shown on the drawing above

☑ Material and construction

Body:	forged brass in compliance with the UBA / 4MS lists, CW617N
Spindle:	machined brass in compliance with the UBA / 4MS lists, CW617N
Handles:	PA-6, green
Spindle seals:	EPDM
O-ring seal:	EPDM
External thread connectors:	acc. to ISO 228
Internal thread connectors:	acc. to ISO 228

☑ Operating data:

Max. operating pressure:	10 bar
Min. operating temperature:	0 °C (water 0,5 °C)
Max. operating temperature:	110 °C
Medium:	Sanitary water or water for heating systems

When the manifold is used in heating systems, the heating water has to have quality according to ÖNORM H5195 or VDI-Standard 2035. The use of ethylene or propylene glycol in a mixing ratio 25- 50% is allowed. Please refer to manufacturers documentation when using ethylene glycol products for frost and corrosion protection. Please note that EPDM gaskets will be affected by Mineral oils lubricants and thus lead to failure of the EPDM seals in the valves that use EPDM seals. HERZ - Sanitary water manifolds is not suitable for usage of aggressive medium (such as: acids, alkalis, combustible and explosive gases;) because it can destroy sealing components.

☑ Description of HERZ - Sanitary water manifolds

Sanitary water manifolds systems are high quality products that are assembled and pressure tested during the manufacturing process under constant quality control.

Advantages of HERZ - Sanitary water manifold systems are:


- All pipes centralized in one place - EASY CONTROL FOR THE USER
- Quick modular connections between manifolds due to easy sealing design
- The position of the handle makes it easier to access
- Fewer fittings means less chance of leakage - direct connection to the sanitary tap, sink, baths, etc.
- Reduced installation time of between 30%- 40% due to fewer fittings required
- Each individual circuit, whether it is hot or cold, can be marked with stickers during installation, allowing easy identification of which isolating tap to close

- Manifolds can be installed in a convenient location for easy access, meaning less disruption to the building occupiers and ease of repair
- Easy to use and maintain
- Reliable design and long service life
- Permanent quality control of production in our own factories
- Easy installation
- Compatibility with other HERZ products


Field of application

HERZ - Sanitary water manifolds can be used everywhere you need to distribute hot or cold water from the source to the consumer (washing machines, baths, sinks, etc.). The manifolds can be plugged on one side with a male G3/4" or G1" plug. Input of the manifold is male threaded G3/4" or G1". We recommend to use HERZ straight or angle isolation valves. Each outlet is possible to connect with a female G3/4" adapter for HERZ PIPEFIX.


Left side connection - Straight valves

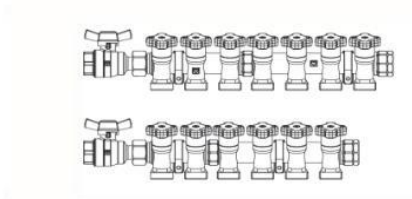

Left side connection - Angle valves

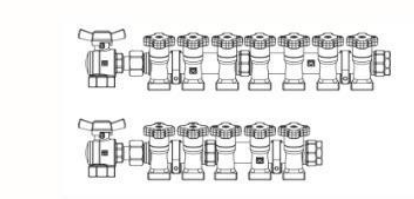


HERZ Pipefix

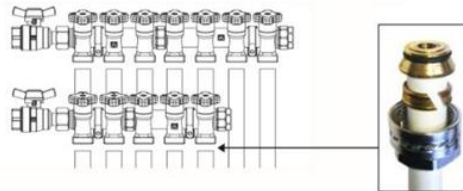



Drinking water system

Point to point plumbing

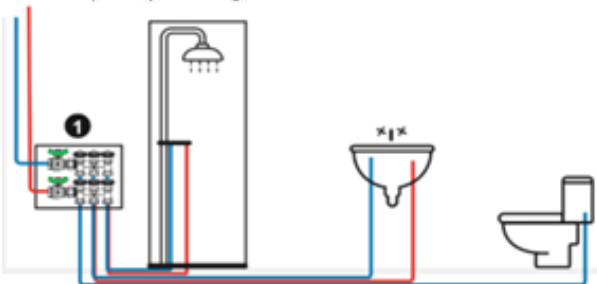


Example of fixture in house

Traditional plumbing

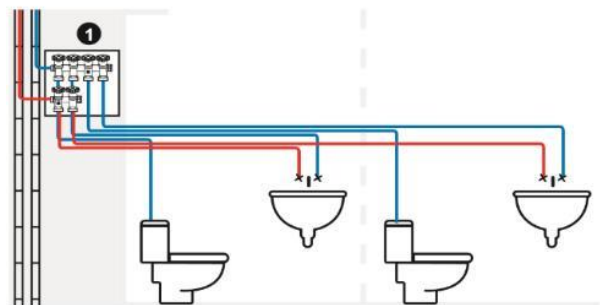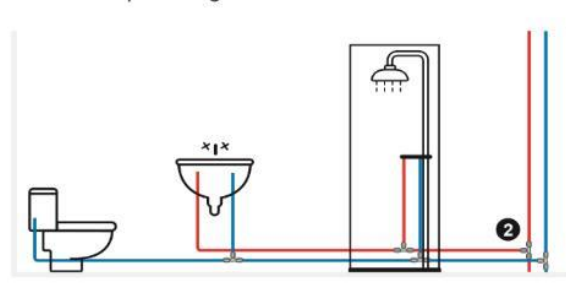



Example of fixture in (apartment) building

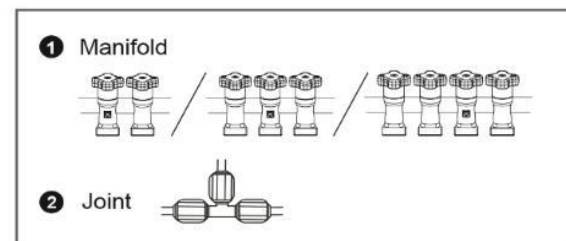



The main advantage of point to point plumbing compared to traditional type of plumbing is the possibility of reducing the number of joints. That way you can decrease the potential risk of leakage.

Assembly instruction

HERZ - Sanitary water manifold systems can be installed directly to the wall using bracket 18422 30. The mounting position is arbitrary.

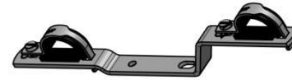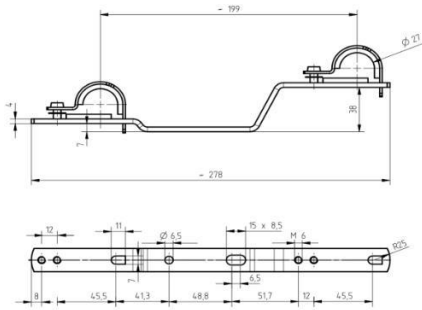

Pipes are screwed onto HERZ Drinking water manifolds. The pipes have to be correctly aligned, so the manifold is not loaded with a bending moment. When using copper or plastic pipes take into account pressure and temperature limits of the selected material. When assembling, use a suitable assembly tool that adapts to manifolds end connections. We recommend you to use HERZ Pipefix G3/4" connection.

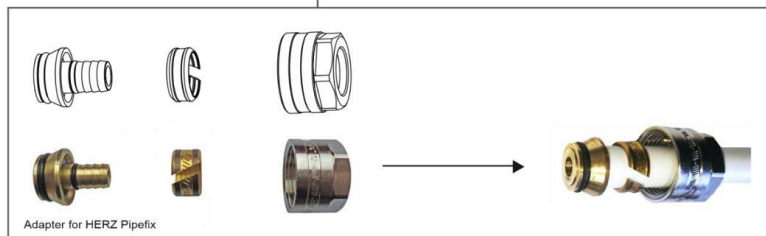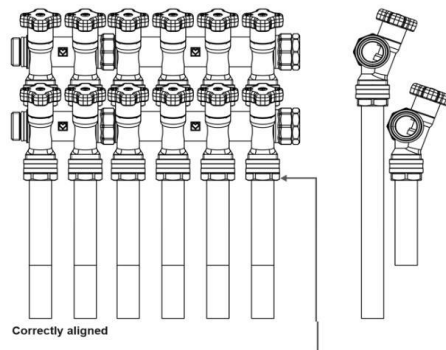

Following assembly, the connections of the manifold must be checked for water-tightness by the installer. All engineering standards and recognized regulations must be adhered to by these specialist staff. If there are impurities in the medium (water too hard, dust, etc.) there should be a filter installed, in other case the impurities can damage the seals of the valves inside the manifold.

WARNING

The system with the HERZ potable-water manifold must be thoroughly flushed to remove any dirt or debris accumulated during installation. Failure to remove contaminants may affect performance and the manufacturer's warranty.

Installing appropriately sized filters at the main supply inlet is recommended. In areas with aggressive water, water treatment must be provided before it enters the valves and fittings.


Access to the manifold must remain unobstructed for any maintenance required on the manifold or valve connections. The pipework to/from the manifold must not be used to support the weight of the manifold.

When connecting the manifold to system components, use suitable sealing materials (hemp, PTFE tape, sealing compound). Do not apply excessive sealing material, as it may damage the threads. All connecting pipes must be correctly aligned to avoid imposing bending moments on the manifold. When using copper or plastic pipes, observe the pressure and temperature limits of the selected material.

Use appropriate assembly tools compatible with the manifold end connections. After assembly, the installer must check the ball-valve connections for water tightness. All applicable engineering standards and recognized regulations must be observed by qualified personnel.


Customization

All HERZ sanitary manifolds can be quickly extended with additional manifolds (DN20: 2/3/4 circ. or DN25: 4/5 circ.). Pre-installed o-ring sealing are mounted on the housing for easier connection of multiple manifolds. There is no need to add additional sealing or glue. Connecting two housings: fully screw the male thread into the female thread. Then unscrew until the handles on the two manifolds align with each other. Before first use we recommend you to use Silicone-based lubricant on the o-ring. HERZ blank plug has to be added at the end of the manifold.

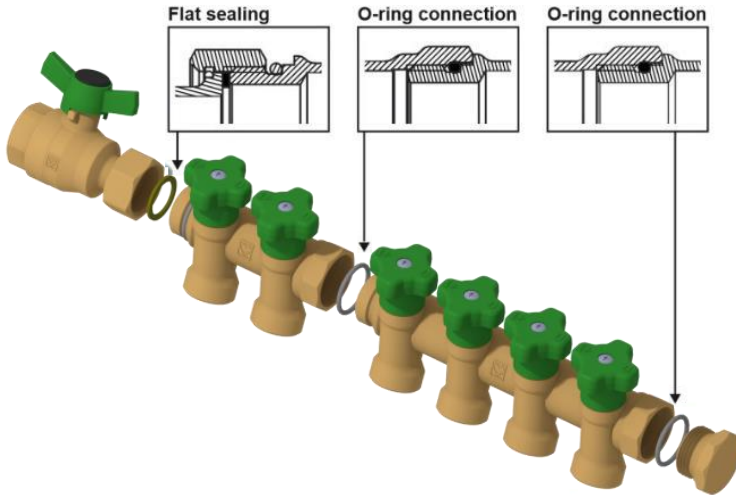


Function principle of components

Rotate the handle counter-clockwise or clockwise to adjust the flow (opening/closing).

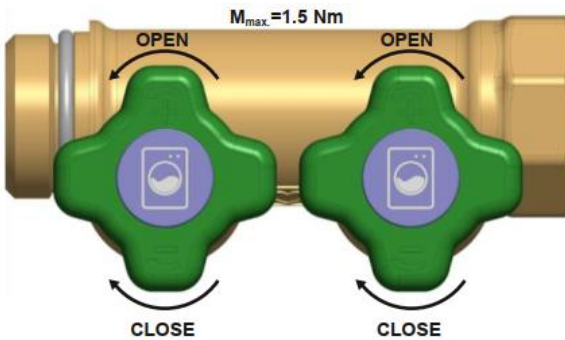

Labelling

Each outlet of sanitary manifolds (e.g. sink, bath, etc.) is identified by applying a small blue or red label with an icon designating the point of use (*labels supplied with product). Use RED labels for hot circuit and BLUE labels for cold circuits.

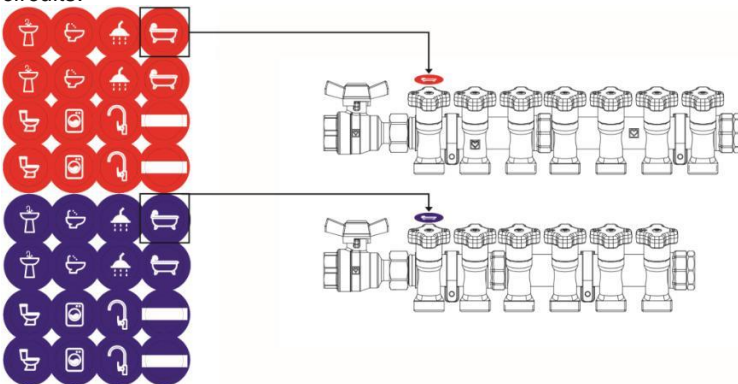

☑ Brass

HERZ uses top-quality brass that is in compliance with the UBA and 4MS lists. Components of HERZ - Drinking water manifolds systems are made from brass due to its good strength and excellent corrosion resistance.

Pursuant to Article 33 of the REACH Regulation (EC No. 1907/2006), we are obliged to point out that the material lead is listed on the SVHC list and that all brass components manufactured in our products exceed 0.1% (w / w) lead (CAS: 7439-92-1 / EINECS: 231-100-4). Since lead is a component part of an alloy, actual exposure is not possible and therefore no additional information on safe use is necessary.

☑ Maintenance instruction

Regular maintenance of potable-water manifolds ensures reliable operation, stable flow, and water quality. Properly maintained components help prevent pressure drops, leakage, and hygiene issues. It is mandatory to close and open the valve periodically (at least twice a year, every 6 months). No mineral oil lubricant should be used for the maintenance of the valves. Usage of these materials will damage the sealing elements. Silicone-based lubricant are allowed.

Perform periodic maintenance at least twice a year, following the steps below:


1. Inspect and clean inlet strainers/filters; replace cartridges if required.
2. Verify non-return (check) valves operate correctly and are free of debris.
3. Remove limescale from internal components using a suitable potable-water-safe descaling agent; rinse thoroughly.
4. After servicing maintainable components, recommission the manifold: check for leaks, confirm correct valve positions, flush lines, and verify pressures and flow.

☑ Disposal instruction

The disposal of HERZ - Drinking water manifolds systems must not endanger the health or the environment. National legal regulations for proper disposal of the HERZ - Drinking water manifolds systems have to be followed.





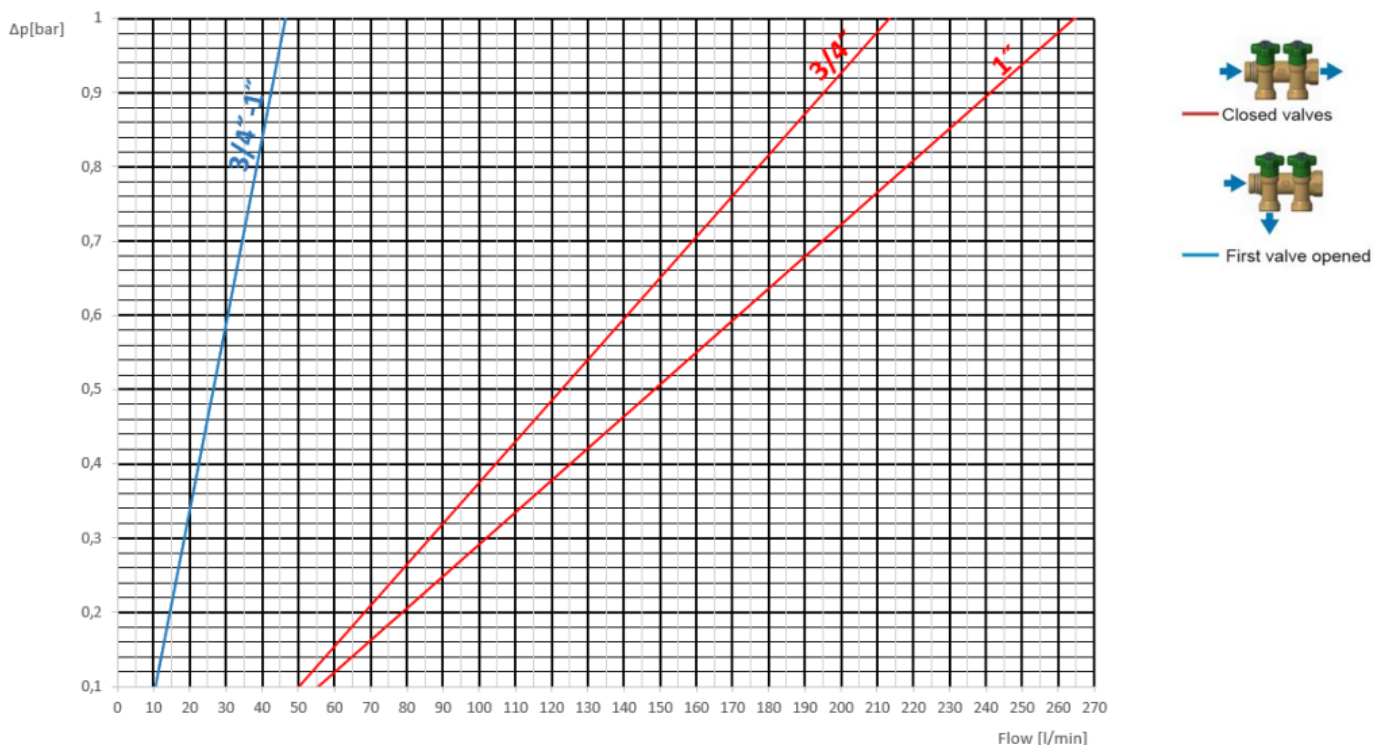

☑ Pressure drop graph

HERZ - Sanitary Water Manifold



Accessories

Illustration	Description	Item number	Suitable for
	Handle & spindle	1 6319 20	2 8530 xx
	O-ring 23 x 2.5	1 6319 21	2 8530 0x
	O-ring 30.3 x 2.4	1 6319 33	2 8530 1x
	Plug G3/4" (*O-ring included)	1 6319 22	2 8530 0x
	Plug G1" (*O-ring included)	1 6319 32	2 8530 1x
	Closing nut G3/4"	1 6316 23	2 8530 0x
	Closing nut G1"	1 6319 31	2 8530 1x
	Straight ball valve with free moving nut G3/4" (green handle, CW617N)	1 2221 03	2 8530 0x
	Straight ball valve with free moving nut G1" (green handle, CW617N)	1 2221 04	2 8530 1x
	Straight ball valve with free moving nut G3/4" (red handle, nickel plated, CW617N)	1 2221 02	2 8530 0x

	Angle ball valve with free moving nut G3/4" (green handle, CW617N)	1 2224 23	2 8530 0x
	Angle ball valve with free moving nut G1" (green handle, CW617N)	1 2224 24	2 8530 1x
	Angle ball valve with free moving nut G3/4" (red handle, nickel plated, CW617N)	1 2224 22	2 8530 0x
	Pipefix connectors	Plastic pipe connection: 1 6095 01 (G3/4 - 16 x 2) 1 6095 02 (G3/4 - 20 x 2) 1 6095 03 (G3/4 - 26 x 3)	2 8530 xx
	Copper pipe connectors	1 6276 18 (G3/4 - 18)	2 8530 xx
	Bracket	1 8422 30	2 8530 xx
	Distributor cabinet*	1 6319 24 (5 circ. 3/4" or 5 circ. 1") 1 6319 25 (8 circ. 3/4" or 8 circ. 1") 1 6319 26 (11 circ. 3/4" or 10 circ. 1")	2 8530 xx

*Minimum size for distributor cabinet. By using shut-off valves the size of distributor cabinet has to be dimensioned larger.

All specifications and statements within this document are according to information available at the time of printing and meant for informational purpose only. Herz Armaturen reserves the right to modify and change products as well as its technical specifications and/or its functioning according to technological progress and requirements. It is understood that all images of Herz products are symbolic representations and therefore may visually differ from the actual product. Colors may differ due to printing technology used. In case of any further questions don't hesitate to contact your closest HERZ Branch-office.

Scheme

